
COOKTOP, BURNER AND GRATE PARTS

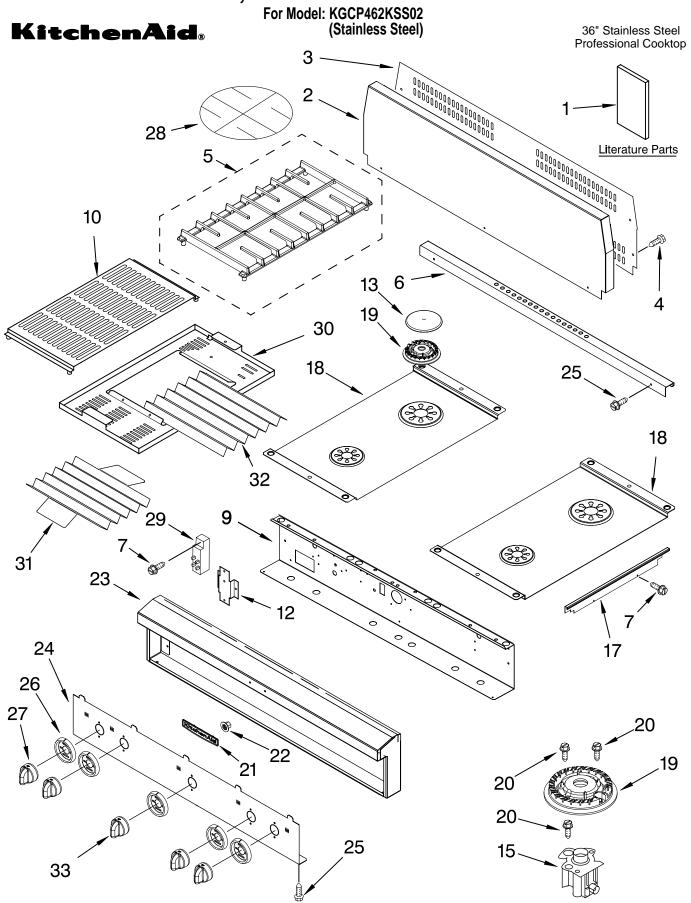


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP, BURNER AND GRATE PARTS For Model: KGCP462KSS02 (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT8285586	Wiring Diagram
	LIT8285588	Use & Care Guide
	LIT8285479	Installation
	=	Instructions
	LIT8285589	Instructions, LP Conversion
2	4454960	Backsplash
2 3 4	8284712	Support,Backsplash
4	3196537	Screw, 8-18 x 3/8
5	4454963	Grate, Burner
6	8284851	Trim, Island
7	3400843	Screw, 8-18 x 1/4
9	8285478	Support, Control Panel
10	8284741	Grate, Grill
12	8285005	Bracket, Spark
	4455243	14K (2)
13	002 .0	Cap, Burner
15		Holder, Orifice
	8284669	6K (2)
	4456622	Turbo (2)
	4456920	Auxillary (2)
		Includes Orifice
16	4454974	Support Rail
17		Trim, Side
	8285161	Right Hand
	8285162	Left Hand
18	8284812	Cooktop, Black
	4449040	Screw (4)
19		Burner Head 14K
	4455849	Turbo (2)
	4455979	Auxillary (2)
20	3368921	Screw, 7-18 x 3/4
21	2005292	Nameplate
22	2004333	Palnut
23	4455217	Control Frame
24	8284748	Panel, Control
25	3196176	Screw, 8–18 x 1/2
26	4455192	Bezel, Knob
27	4454970	Knob, Burner
28	4455109	Plate, Simmer
29	8522423	Module, Spark
30	8284918	4-Burner
30 31	8284919	Frame, Wave Tray
32	8284917	Plate, Wave Plate, Wave tray
32	3177991	Screw
33	8284742	Knob, Grill
55	0204142	TATION, OTHE

BURNER BOX, GAS VALVES, AND SWITCHES

For Model: KGCP462KSS02 (Stainless Steel)

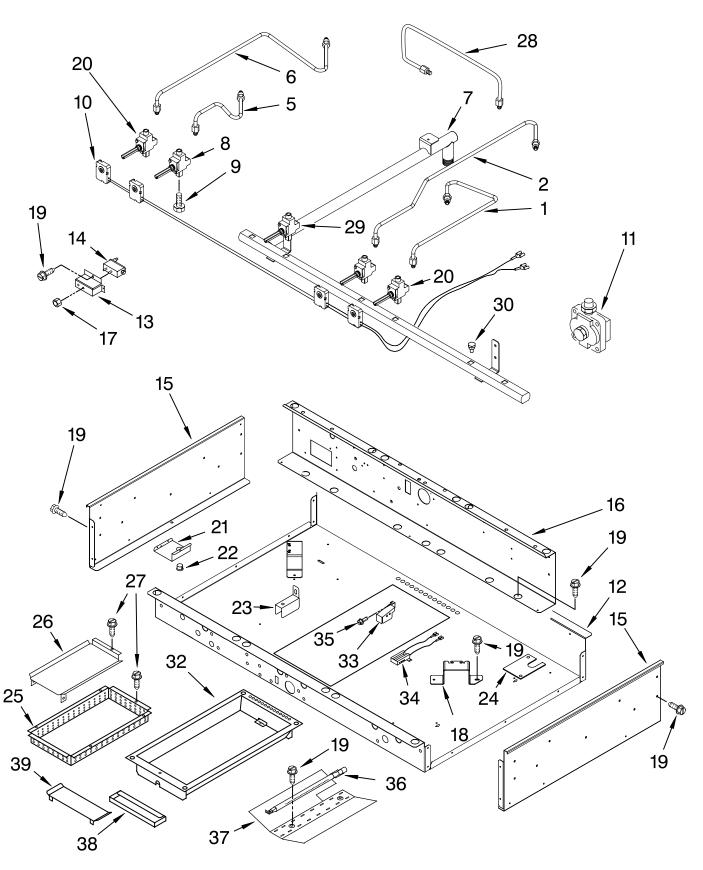

BURNER BOX, GAS VALVES, AND SWITCHES

For Model: KGCP462KSS02 (Stainless Steel)

PTION
nel
er
ar Spill
•
s Grill
fold
rill
ınitor
II
r, Grill
TED
ill
/)

PARTS NOT ILLUSTRATED

Illus. Part No. No. DESCRIPTION

WIRING HARNESS PARTS

3192231 Power Cord
4456627 Harness, Wire
4173634 Bushing, Electric
1129449 Bushing
4456628 Harness, Wire
Jumper
4456909 Harness, Grille
Switch

Miscellaneous

8284782 L.P. Orifice Spud

Miscellaneous

8284663 L.P. Orifice Spud